

MK7 MICROPHONE UNIT

‘A’ Karaoke

With the toggle switch in position ‘A’, the microphone will be permanently enabled so that any audio via the microphone will be heard as well as the music.

‘A’ Quiz Night

If the speak button is pressed while the toggle switch is in position ‘A’ the music will be faded out for as long as the button is pressed, the music will fade back in when the speak button is released.

‘B’ Auto Fade

With the toggle switch in position ‘B’ a message can be issued from the microphone by pressing the speak button. The music will auto fade for the duration of the message. The switch on the microphone should be left in the ‘ON’ position.

Note:- Speak button is normally closed and pushed to open.

